

Tribute X v1.2.2 for Traktor pro 4

MAIN LAYOUT

Pad Pages A-D (Track Decks A-D)

Full Screen

Master Clock Start → CHANNEL MIDI PLUG-IN Instance

Layout Selector → ARRANGER MIXER

Browser View → BROWSER SAMPLING

Knob Page Select →

Auto Master → AUTO

Deck Focus Select ABCD LED indicates Deck Focus/Remix Deck Focus C D (Shift)

Sample Page Up [SHIFT]

Several Knob Pages Apply To Track Decks

Some Knobs are Touch Sensitive and act as switches

Sequencer On/off

TOUCHSTRIP Perform

Main Transport Buttons for Tracks A-D

8 Hot Cues that match Traktor's Colors

Loop on/off, size, loop jump, beat jump

ONLY APPLY TO REMIX DECKS C/D
Trigger, Select, Solo, Mute and Stop Samples/Loops, Swing and save Remix Deck. Select Remix C or D

Press and hold SHIFT to access Secondary layer

FREEZE MODE; Triggers up to 16 slices

TOUCHSTRIP + these buttons adjust: Pitch, Phase, Mixer FX, Key

PATTERN PLAYER CONTROLS
PATTERN and LOCK buttons program Pattern Player Step with the 16 Pads

ENCODER MODES & FUNCTIONS

- NORMAL: Deck Focus, Loop Size, Loop On/Off
- SHIFT: Focus Remix Deck C or D, Sample Page Select
- BROWSER: Scroll through folders and load files
- MISC: Volume, Tempo/Fine Adjust, Mixer FX Select

* The actual SHIFT button is not used!!
Use the one above it instead

If you see two functions available, you must first press and hold SHIFT and then press/turn the button/knob in order to access the secondary function.


EFFECTS LAYOUT

Pad Page E and Knob Pages


(Turn on FX Units 1, 2, 3, and 4)



Press PAD E For FX Units

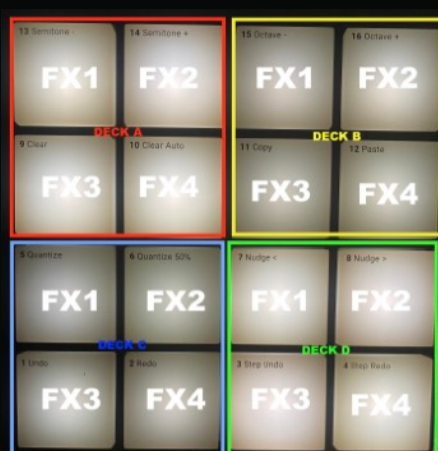

FX Units 1-4 On/Off For Decks ABCD

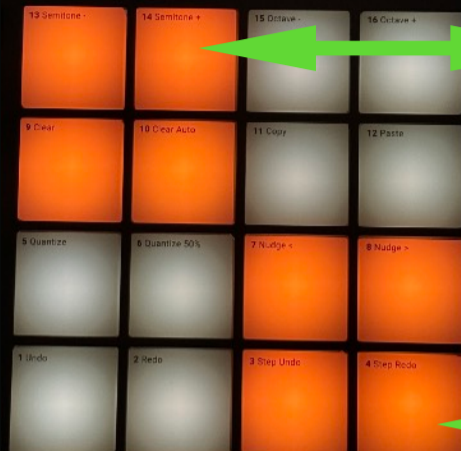




Pad turns orange when FX Unit is ON/
Mint Green= Pattern Player
Gray means FX Unit is OFF




Pad Colors Mirror Traktor's Display

There are 2 Knob Pages that control FX Units 1, 2, 3, 4; they are identical

Turn FX On-Off / Save FX Settings

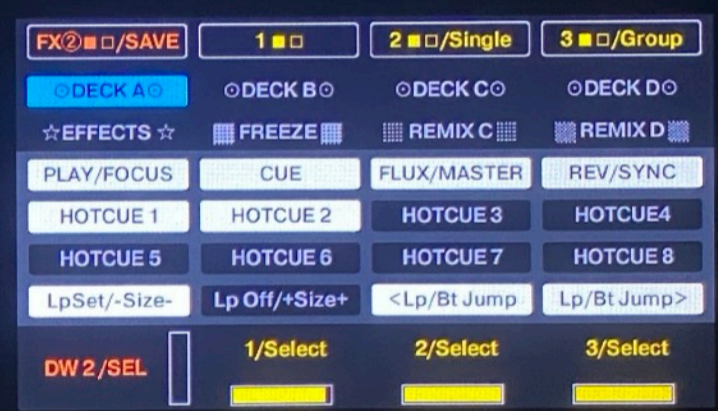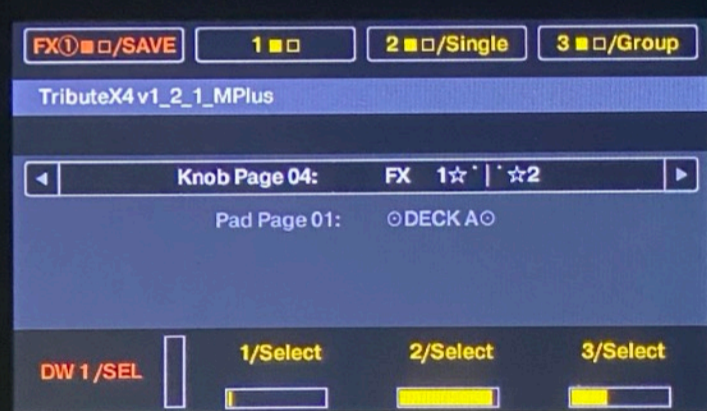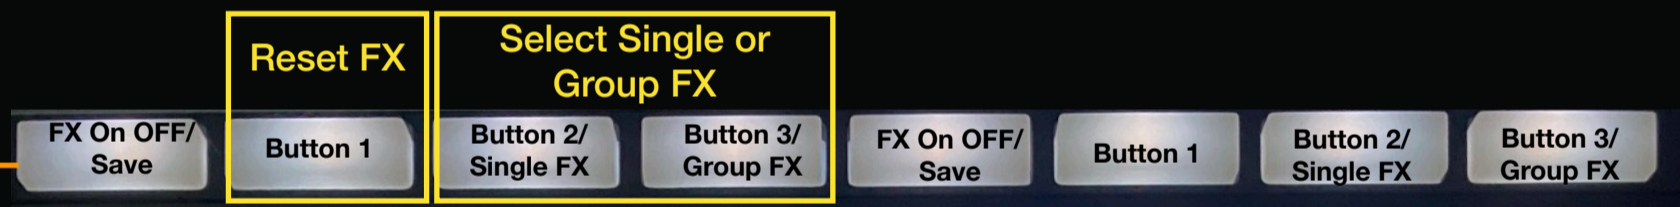

Adjust Dry Wet/ Select Group FX

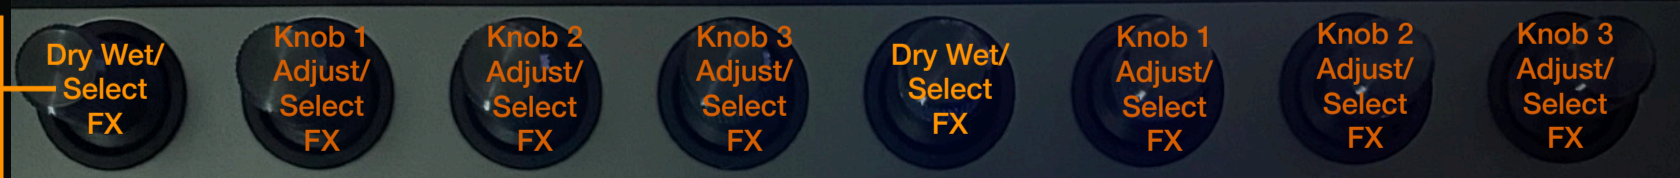

Knobs 1, 2, 3 Adjust FX Level / Select Single Effects

PATTERN PLAYER

Pad Pages A, B, C, D (Must Press and Hold PATTERN)

On this Example, all steps are on

Pad Colors Mirror Traktor's Display

PAD COLOR GUIDE:
 Current Step
 Step On
 Step Off

PATTERN
 LOCK
 Ext Lock

Press and Hold PATTERN to view (momentarily) Pattern Player On Pads A-D. Press LOCK and the Pads will remain on Pattern Player Mode until SHIFT, PATTERN, or LOCK is pressed again

Pattern Player 1 is viewable on Pad Page A
 Pattern Player 2 is viewable on Pad Page B
 Pattern Player 3 is viewable on Pad Page C
 Pattern Player 4 is viewable on Pad Page D

There are 2 Knob Pages that control Pattern Players 1, 2, 3, 4; they are identical

Pattern Player on-off/Store	Select Previous / Reset Pattern	Select Next / Load Pattern	Duck On-Off / Switch to Pattern Player Mode
PLAY②/Store	PREV/Reset	NEXT/Load	DUCK/Player
DECK A	DECK B	DECK C	DECK D
EFFECTS	FREEZE	REMIX C	REMIX D
PLAY/FOCUS	CUE	FLUX/MASTER	REV/SYNC
HOTCUE 1	HOTCUE 2	HOTCUE 3	HOTCUE 4
HOTCUE 5	HOTCUE 6	HOTCUE 7	HOTCUE 8
LpSet/-Size-	Lp Off/+Size+	<Lp/Bt Jump	Lp/Bt Jump>
VOL2/KIT Adjust Volume Level/ Select Pattern Kit	PATTERN1-8 Select Pattern 1 through 8	PITCH Adjust Pitch	DECAY Adjust Decay

The Pad Colors on Pad Page E Match the Color of the FX Unit In Traktor. On this example, FX Unit 1 is set to Pattern Player Mode and assigned to Deck A. FX Unit 2 is set to FX Mode. It is on and assigned to Deck B.

FREEZE MODE LAYOUT

Pad Page E and Knob Pages

(Control Number and Size of Slices)

Press PAD F
To View and Trigger
Slices (FREEZE)



White light displays
current slice number.

On this example Slice
#13 is being triggered

Knob Pages 14 and 15 Control FREEZE parameters (they are very similar)

Loop / In Active/Out Freeze on-off Flux On-Off

LOOP SET/IN ACTIVE/OUT FREEZE FLUX

TributeX4 v1_2_1_MPlus

Knob Page 14: RMX SAMPLING | . | REC

Pad Page 03: DECK C

LP SIZE MOVE SLICE# 1-16 SLC Size

Adjust Loop Size Move Loop Adjust Number of Slices Select Slice Size

Move Grid Left-Right Freeze on-off Flux On-Off

GRID/SET GRID-/DEL FREEZE/AUTO ADV PANEL

DECK A DECK B DECK C DECK D

EFFECTS FREEZE REMIX C REMIX D

PLAY/FOCUS CUE FLUX/MASTER REV/SYNC

HOTCUE 1 HOTCUE 2 HOTCUE 3 HOTCUE 4

HOTCUE 5 HOTCUE 6 HOTCUE 7 HOTCUE 8

LpSet/-Size- Lp Off/+Size+ <Lp/Bt Jump Lp/Bt Jump>

tempo/zoom SEEK #Slices/Size Cue/Dek Flav

Tempo Adjust / Zoom Waveform Seek Position / Fine Seek Select Number of Slices/ Adjust Slice Size Select Cue Type / Select Deck Flavor

FREEZE slice count
set at 16 with each
size being rather large
(Looks zoomed out)


Here you have the
same slice count (16)
but the slice size is
much smaller.




REMIX DECKS MODE LAYOUT

Pad Page G-H and Knob Pages 11-14

Only Decks C and D are mapped to be Remix Decks

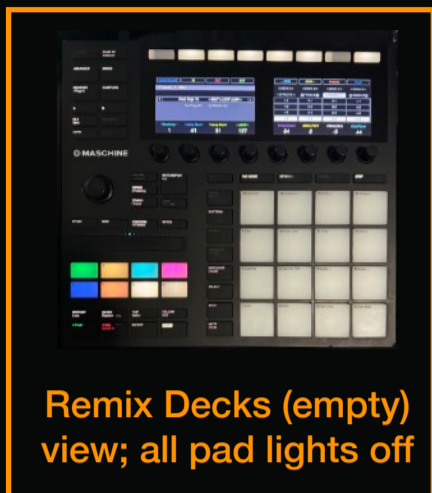


Remix Decks (empty) view; all pad lights off

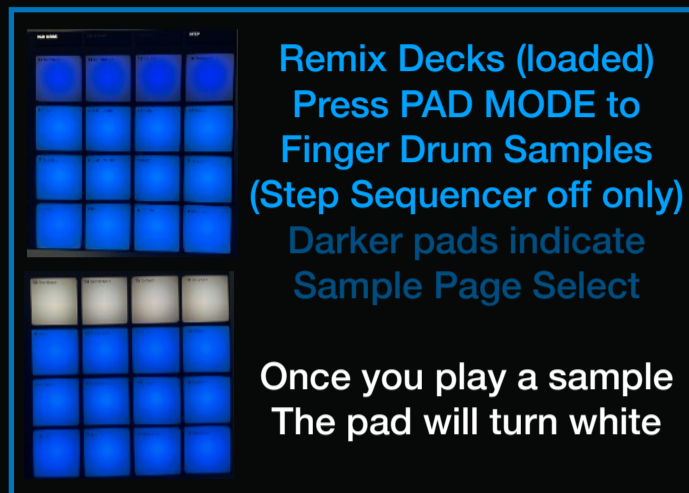

Remix Decks (loaded)
Press PAD MODE to Finger Drum Samples (Step Sequencer off only)
Darker pads indicate Sample Page Select

Once you play a sample The pad will turn white

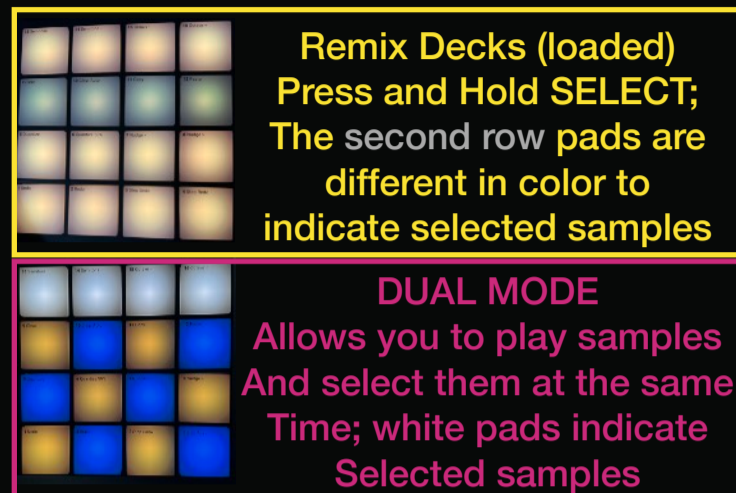

Remix Decks (loaded)
Press and Hold SELECT; The second row pads are different in color to indicate selected samples


DUAL MODE
Allows you to play samples And select them at the same Time; white pads indicate Selected samples

Knob pages 6-9 control Remix Deck Parameters such as Volume, Filter, FX, Key, Sequencer Step Size, Trigger Type, Punch Mode, Gate, Latch, Loop or 1-Shot, Select Sample Source and Capture, Reverse, Delete, and Load.


TIP: These knob pages apply to both Remix C and D but only one at a time; you must first select Remix Deck focus button on screen 6 or push and hold SHIFT and then click left on the 4D encoder for Remix Deck C or to the right for Remix Deck D.




Slot 1 (green) represents the Kick

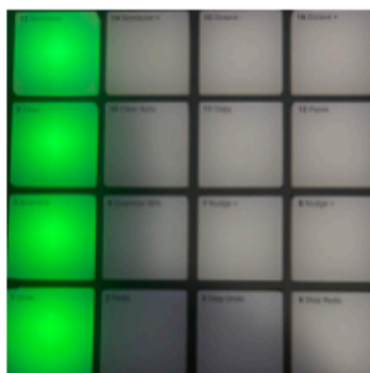


Slot 2 (amber) represents the Snare

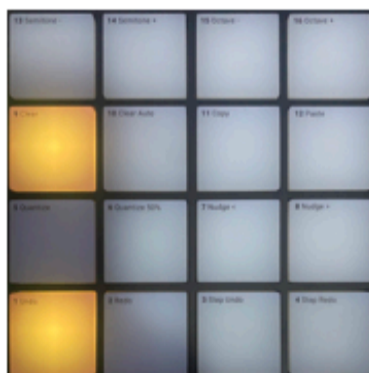

Slot 3 (blue) represents a Hi Hat

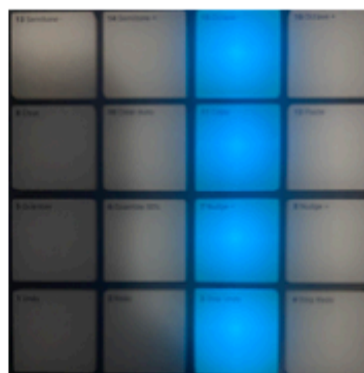

Slot 4 (purple) represents a Low Tom

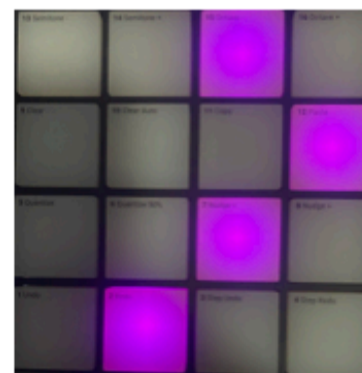

TIP: to erase a step simply press the step (pad) you want to erase. To erase all STEPS on a SLOT, press and hold [SHIFT] and the corresponding [SEQ_] button at the top of the right screen and it will remove all steps on that slot only.

Press Seq 1-4 and program a step pattern on the 16 pads. Pattern length can be shorten to make interesting odd time signature beats; do the same for all 4 Slots.



* To access secondary layer (to the right of the slash /) Press and hold "Shift" first.

MIXER, MIXER FX AND EQ

Knob Pages 1, 2, 3


The buttons turn on the Monitor option for each channel. Press with [SHIFT] and you turn off the Gain
 Knob page 1 has volume knobs for channels A, B, C, D. When turned with [SHIFT], the Gain for each channel can be adjusted

Press the button to turn on-off the Mixer FX. Press with [SHIFT] and it resets Mixer FX level to 0 (the center)
 Turn the Knob to adjust the Mixer FX levels. Press along with [SHIFT] and you can change the Mixer FX from here

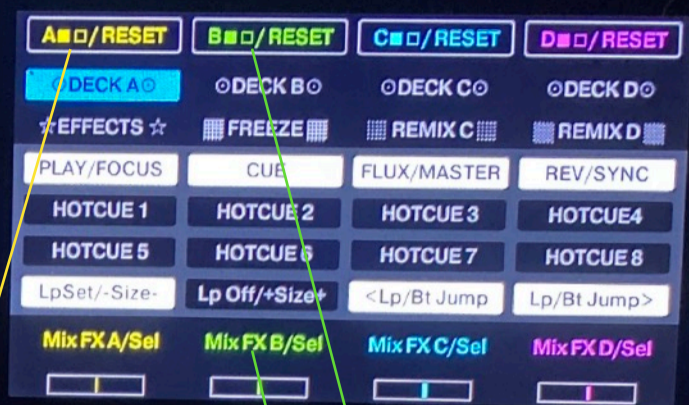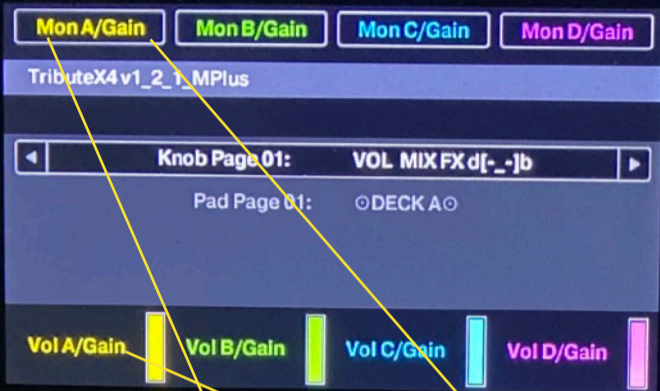


Press to Focus Deck A

Kill Low, Mid, High EQ

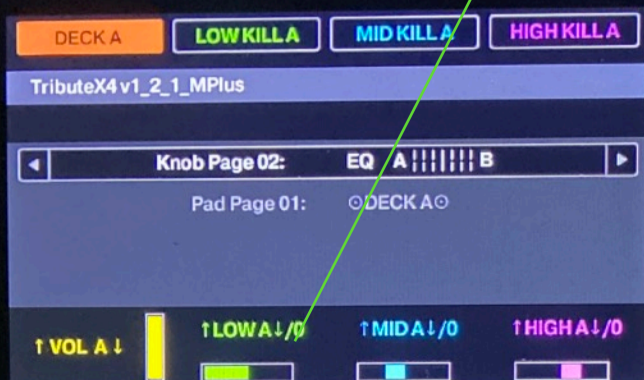

Adjust Volume Level Channel A

Adjust Channel A EQ Level. Press with [SHIFT] and it will reset EQ to 0

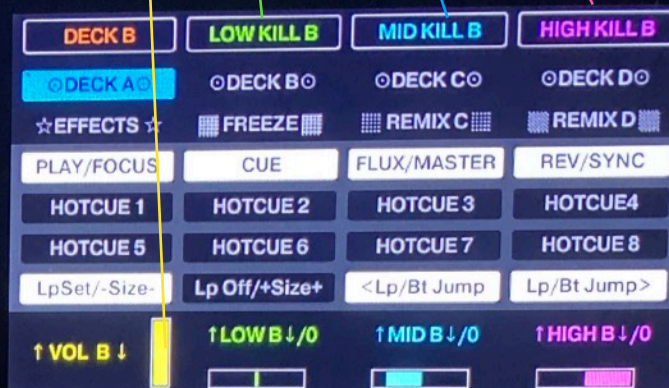

The right screen has the same functions as the but for Deck B

Knob Page 3 has the same functions for Decks C and D

CHANNEL STRIP EQ 2 AND XONE EQ LAYOUT

Knob Pages 4, 5, 6 and 7

The idea behind Knob Pages 4 and 5 is to mimic the mixer layout of Traktor Kontrol S4 mk3, S2 mk3 and the S3. From the bottom up it would be as follows: Mixer FX, Low, Mid, and High.



Knob Pages 6 and 7 were mapped to cater to those of you that prefer the XONE mixer layout. It allows you to control Low, Mid Low, Mid Hi, and High EQ levels and its corresponding KILL buttons.

