

TRIBUTE FX4

4 EFFECT UNITS/PATTERN PLAYERS



PAD COLOR GUIDE:

Current Step
Step On
Step Off

On this Example,
all steps are on

Pad Colors Mirror
Traktor's Display

SHIFT

Pattern Player 1 is viewable on Pad Page A
 Pattern Player 2 is viewable on Pad Page B
 Pattern Player 3 is viewable on Pad Page C
 Pattern Player 4 is viewable on Pad Page D
 Assign FX Units to Decks on Pad Page E


There are only 5 Knob Pages (Screens)
 And 5 Pad Pages (16 Pads)

Knob Pages 1 and 2 Control FX Units, 1, 2, 3, 4
 You can control and select FX on 4 FX Units Change
 between Single, Group, or Pattern Modes

FX on-off/ Save	Button 1	Button 2/ Single FX	Button 3/ Group FX
--------------------	----------	------------------------	-----------------------

DW1/SEL Dry Wet Adjust/ Select Single FX	FX1/Select Knob 1/ Select Group FX	FX2/Select Knob 2/ Select Group FX	FX3/Select Knob 3/ Select Group FX
--	---	---	---

The Pad Colors on Pad Page E Match the Color of the
 FX Unit In Traktor. On this example, FX Unit 1 is set to
 Pattern Player Mode and assigned to Deck A. FX Unit
 2 is set to FX Mode. It is on and assigned to Deck B.

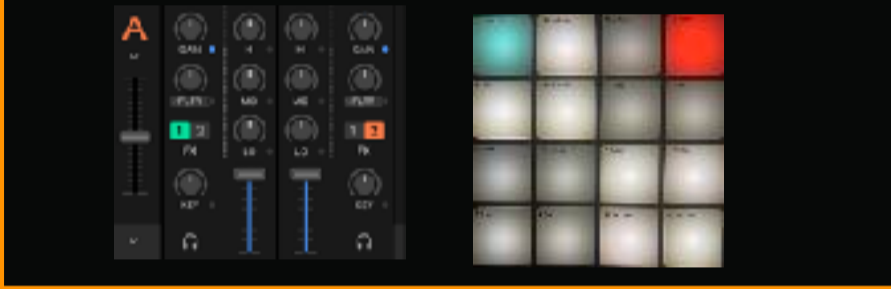

Knob Pages 3 and 4 Control Pattern Players 1, 2, 3, 4
 Turn Pattern Players on-off, select kits, patterns, next
 previous, save, reset pattern, switch to Pattern Mode

Pattern Player on-off/ Store	Select Previous / Reset Pattern	Select Next / Load Pattern	Duck On-Off / Switch to Pattern Player Mode
---------------------------------------	--	-------------------------------------	--

VOL/KIT Adjust Volume Level/ Select Pattern Kit	PATTERN1-8 Select Pattern 1 through 8	PITCH Adjust Pitch	DECAY Adjust Decay
--	--	--------------------------	--------------------------

Knob Page 5 Controls Pattern Player 1 and FX Unit 2

